

PIANO /
ROCKER
SWITCHES



**PIANO /
ROCKER
SWITCHES**



SW261028
WORK LIGHT SWITCH
12 V 10 AMP



SW261012
REVOLVING LIGHT SWITCH
SPECIFICATION:
12V 10 AMP
LED LIGHT FUNCTION



SW261003
PIANO SWITCH (SINGLE)
(WIPER / HEADLIGHT)



SW261004
PIANO SWITCH (FAN)
3 PINS

SW261008
PIANO SWITCH (HEADLIGHT)
4 PINS
3 WHEELERS



SW261001
PIANO SWITCH (TWO)

SW261015 - 3 BUTTONS

SW261013
PIANO SWITCH (FOUR)
3,4, CV WHEELERS



SW261001
PIANO SWITCH (TWO)