

PUSH
BUTTON
SWITCHES



PUSH BUTTON SWITCHES



SW311028
HORN SWITCH (PLASTIC BODY)
12V 10 AMP



SW311012
HORN BUTTON SCREW TYPE
SCREW TERMINALS, CHROME, Ø 22MM, WITH
WATER PROTECTIVE CAP
REPLACES ~ 0331A



SW311020
PUSH START BUTTON, FIX HOLE: Ø 19MM
GC 1000, (USE A04-0639B FOR IGNITION SWITCH)



SW311004
STARTER SWITCH (STEEL)
IDEAL TYPE
FIX HOLE: Ø 15.5MM



SW311009
ENGINE START BUTTON
PLASTIC BODY Ø 22MM, WITH WATER
PROTECTIVE CAP
407, 608



SW311004
HORN SWITCH (METAL BODY)
12V 7 AMP



PUSH
BUTTON
SWITCHES



SW311025
HEATER SWITCH
12V DC



SW311026
STARTER SWITCH
12 V DC